 




S201 JOYPAD USER MANUAL

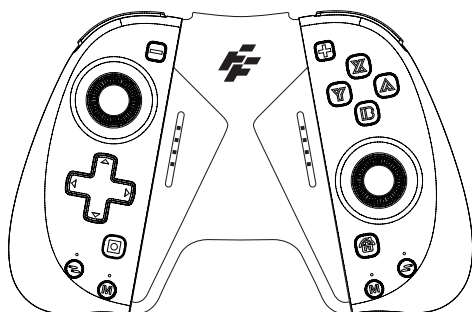

www.flashfire.tw


» FIRST TIME TO PAIR & CONNECT:

Method 1:

Please insert and slide down the joy-con along the NSW console's sliding rails until it clicks, which means joy-con successfully connect to NSW console (Recommend).

Method 2:

Turn on the console, enter your console interface "Controllers → Change Grip / Order", and then press the SYNC button (it's under the signal light of the side of Joy-Con) until four signal lights flash in sequence, waiting for the connection to succeed. Reference Step1- Step2-Step3 (Please reference the Method 2 about connecting to NSW Lite.)

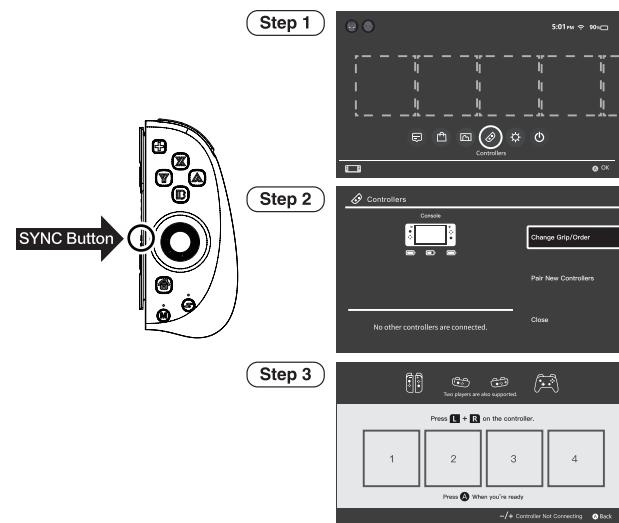

A NSW console can log in up to 10 control devices, one joy-con is equivalent to one control device. After connecting to the console, take out joy-cons from console to use.

» RE- CONNECTION

Status of console is turning on:

- Re- connection after joy-cons take off console's rail:
- After the right joy-con is off the slide rail of the console, press any button for several seconds, and four signal lights flash in sequence, waiting for the connection to succeed.
- After the left joy-con is off the console's slide rail, press the any button for several seconds, and four signal lights flash in sequence, waiting for the connection to succeed.

※ If cannot re-connection, please operate follow the first time paired & connected method.

» ONE-KEY WAKE UP

When console is in standby, which support press "Home" button to wake up console.

» TURBO FUNCTION

Buttons can set turbo function: A/B/X/Y/L/ZL/R/ZR Button

1. Turn on the manual turbo function: first hold down the button , then press a function button to turn on the manual turbo function of this button.
 2. Turn on the automatic turbo function: hold down the button, then press the button that has turned on the manual turbo to turn on the automatic turbo function of this button
 3. Turn off the turbo function: hold down button, then press the button that has turned on automatic turbo to turn off the turbo function of this button.
- ※ The turbo buttons' function of left and right joy-con are not interoperable (It means the left joy-con turbo function only can be set by the left Joy-con turbo button, the right joy-con turbo function only can be set by the right Joy-con turbo button)

» CHARGING

When the joy-con is on the console, joy-con can be charged by charging the console. Please check the status on " Controller" option.When the Joy-con is taken away the console, joy-con is charged by using USB cable, the status can check through the led indicators.

Full Charged: LED lights off

Charging: LED lights flash

» PROGRAMMING SETTING

Programmable Buttons: A/B/X/Y/L/ZL/R/ZR button and D-pad button

1. Keep the controller under working, press "M" for 3s until the corresponding indicator light flashes slowly and enter into programming mode.
 2. Press the buttons that need to be set in turn, and the programming button will record every button's press time interval.(Eg. : Press "B" button first, wait 1 second to press the "A" button, wait 3 seconds to press the "X" button, last press the "M" button to save and exit after the setting is finished. At this time, the function of the "M" button is "B" button, after 1 second is "A" button, after 3 seconds is "X" button), you can check whether the setting is successful on the console "System Settings → Controllers and Sensors - Test Input Devices → Test Controller Buttons".
 3. Clearing the programming setting: keep controller under working, press"M" button for 6 seconds until corresponding indicator light flashed quickly, release"M" button, then the programming setting be cleared.
- ※ The programming setting function of the left and right Joy-Con can't be interoperable (That's the programming setting function of the left (right) Joy-Con can only be set by left (right) joy-con buttons). The programming setting can be memorized, after the controller is disconnected and connect to the console again, the last programming setting is automatically memorized

» REMINDER

Whether connect with bluetooth or attach to the console directly, please don't touch the joysticks, otherwise controller will drift. If controller has drifted, please turn off the controller and reconnect or attach to the console again.

» SAFETY INSTRUCTIONS

- Do not expose the device to direct sunlight or temperatures above 40 or below 0 degrees Celsius.
- Do not hold the unit directly or near naked flames such as candles or similar.
- Do not use or charge the unit during a thunderstorm.
- Do not allow the unit to come into contact with liquids, moisture, or dust. Do not use water, alcohol, or chemicals to clean the unit. Before cleaning the unit, remove the unit from the power source.
- The unit must not be thrown or dropped, as permanent defects may occur.
- Please do not attempt to open the unit or attempt to repair it yourself. Instead, contact the dealer or a qualified technician.
- Keep the unit and accessories away from small children or animals that could swallow small parts!

» SUPPORT


FlashFire Interactive Inc.
Taiwan office:
8F, No. 14, Ln.609, Sec. 5, Chongxin Rd., Sanhong Dist., New Taipei City 24159, Taiwan. Tel: +886-2-2278-1500

» WARRANTY

This product has been given a 1- year warranty by FlashFire Accessories INC. from the date of purchase. Should a defect occur during this period due to faulty materials or workmanship, the dealer from whom you purchased the device will replace your device with an identical or similar model upon presentation of proof of purchase. This warranty does not apply to defects resulting from accidental damage or misuse. Local legal regulations are not affected by this.



S201 JOYPAD 使用說明書

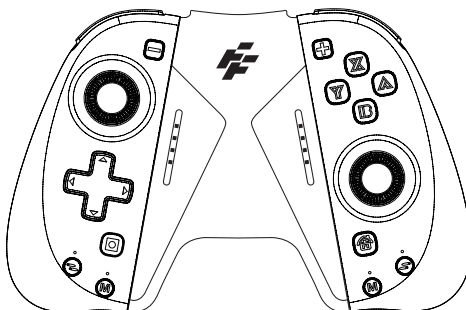

www.flashfire.tw

» 首次配對和連接：


方法 1：

請沿著 NSW 主機的滑軌插入並向下滑動 Joy-con，直到它扣緊，這表示 Joy-con 已成功連接到 NSW主機（推薦）。


方法2：

打開 NSW 主機，進入控制台介面“控制器→更改拿法/順序”，然後按 SYNC按鈕（位於 Joy-Con 側面的信號燈下），直到四個信號燈依次閃爍，等待連接成功。參考圖片-1、圖片-2、圖片-3（Switch Lite 請參考方法2連接）

圖片 1

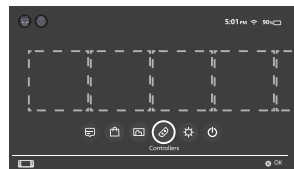

圖片 2

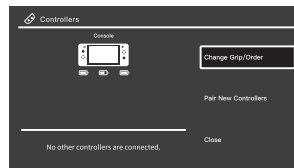

圖片 3



一台 Switch 主機最多可以登錄 10 個控制設備，一個 Joy-con 相當於一個控制設備。連接到主機後，可從主機上取出 Joy-con 使用。

» 重新連接方式：

主機為開機狀態下

- Joy-con 從 Switch 主機滑軌取出後會重新連接。

- 右 Joy-con 不在主機上時，按住任意按鈕幾秒鐘，四個信號燈依次閃爍，等待重新連接成功。
- 左 Joy-con 不在主機上時，按住任意按鈕幾秒鐘，四個信號燈依次閃爍，等待重新連接成功。

※ 如果無法重新連接，請按照第一次配對/連接方法進行操作。

» 一鍵喚醒功能：

當主機處於待機狀態時，支援按「主頁」按鈕喚醒主機。

» 連發功能：

可設置連發功能按鍵的有：A/B/X/Y/L/ZL/R/ZR 按鍵

- 設置自動連發功能：先按住 按鈕然後按下功能按鍵，該按鍵變成自動連發功能。
- 設置自動連發功能：先按住 按鈕然後按下功能按鍵，該按鍵變成自動連發功能。
- 關閉連發功能：按住 按鈕，然後按下已設置自動連發的按鍵，即可關閉此按鈕的連發功能。

※ 左右 Joy-con 的連發設置按鍵功能不可互操作（即左 Joy-con 連發功能只能通過左邊的連發按鍵設置，右邊的連發功能只能通過右邊的連發設置按鍵來設置）

» 充電

當 Joy-con 在主機上時，可以通過為主機來為 Joy-con 充電。請檢查「控制器」選項上的狀態。當 Joy-con 被取出控制台時，使用 USB 線為 Joy-con 充電，充電狀態通過 LED 指示燈顯示。

充滿電：LED 燈熄滅

充電中：LED 燈閃爍

» MACRO編程設置

可編程按鍵的有：A/B/X/Y/L/ZL/R/ZR 按鍵和方向鍵

- 按“M”鍵 3 秒，直到相應的指示燈慢閃，進入編程模式。
- 按下需要依次設置的按鍵，“M”按鍵將記錄每個按鍵的按下時間間隔。例如：先按“B”按鍵，等待 1 秒鐘按“A”按鍵，等待 3 秒鐘按“X”按鍵，最後按“M”按鍵保存，完成後退出設置。此時按下“M”按鈕輸出的鍵值為“B”按鍵，1 秒後輸出“A”按鍵，3 秒後輸出“X”按鍵，您可以在主機介面“設定→控制器與感應器-檢查輸入裝置的運作→檢查按鍵動作”上檢查設置是否成功。
- 清除程式設計設置：按住“M”按鍵 6 秒鐘，直到相應的指示燈快速閃爍，鬆開“M”按鈕，即可清除程式設計設置。

※ 左右 Joy-Con 的程式設計設置功能不能互操作（即左（右）Joy-Con 的程式設計設置功能只能通過左（右）Joy-Con 按鈕設置）。

» 提醒

無論是連接藍牙還是直接連接到主機時，請不要觸控類比搖桿，否則搖桿會飄移。如果搖桿已飄移，請關閉控制器並重新連接到主機。

» 注意事項：

- 請勿將設備暴露於陽光下或高於攝氏40度或低於攝氏0度的溫度下。
- 請勿將本機直接放在靠近火源處，如蠟燭或類似物品附近。
- 雷雨期間請勿使用或充電。
- 請勿使本機接觸液體，濕氣或灰塵。
- 請勿使用水、酒精或化學藥品清潔設備。
- 在清潔本機之前，請從電源上拆下本機。
- 請勿扔擲或摔落本機，否則可能會造成永久性缺陷。
- 請不要嘗試打開設備或嘗試自行維修。
- 使本機和配件遠離可能吞食小零件的小孩或動物！

» 聯絡我們：

24159新北市三重區重新路五段609巷14號8樓

Tel: +886-2-2278-1500

如有商品問題請洽官方臉書粉專，將有專人為您服務。

» 保固：

自購買日起，該產品已獲得「FlashFire雷電迅」的一年保固。如果在此期間有瑕疵或新品不良，請至購買的經銷通路出示購買證明，將會為您服務。
★不適用於因意外損壞或人為導致的損壞★

» 警語

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。