


**FLASHFIRE®**

**KYALAMI**


R A C I N G W H E E L

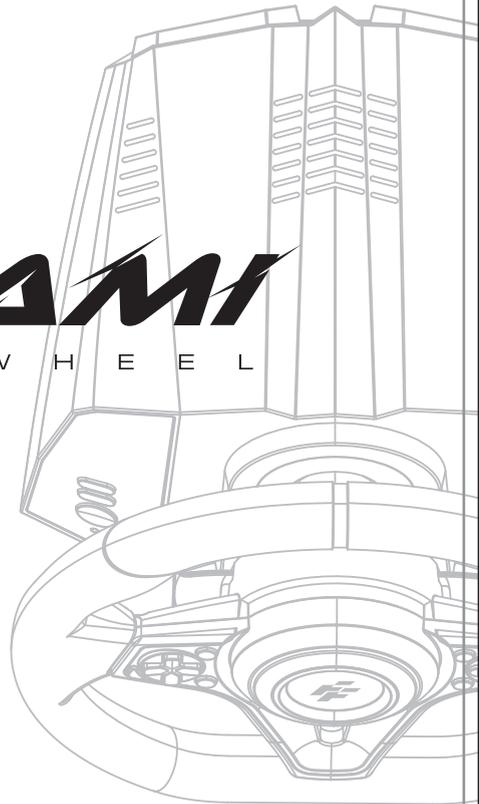


**F116**

F116\_260306\_V06

## PACKAGE CONTENTS

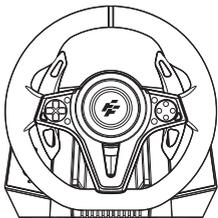


Racing Wheel\*1

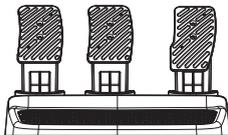


Foldable Pedals\*1




Gear Shifter\*1

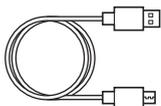

MICRO USB CABLE\*1  
(Cable for Guiding purpose)

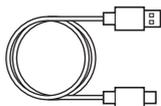

TYPE-C CABLE\*1  
(Cable for connecting to the console)

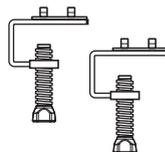

Mount Clamps\*2



M6\*4



User Manual\*1

# TABLE OF CONTENTS

EN ..... 01 - 08

CN ..... 09 - 16






EN:

★ NOTES: When under PC mode, it only supports D-input when the six-speed shifter is connected.  
Please make sure the compatibility of the games/software in advance.  
If the games/software supports X-input only, please remove/deconnect of the 6-speed gear shifter.

CN:

★ 注意：接上排檔桿後PC僅支援D-input模式，請注意遊戲是否相容方能使用！  
若PC遊戲只支援X-input，僅需拔除排檔桿即可正常使用方向盤

## ■ BUTTON LAYOUT:

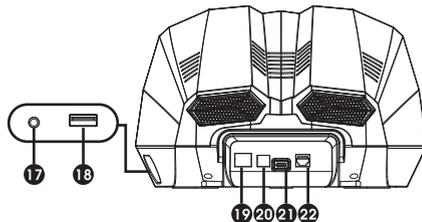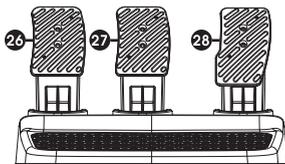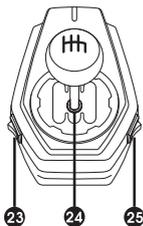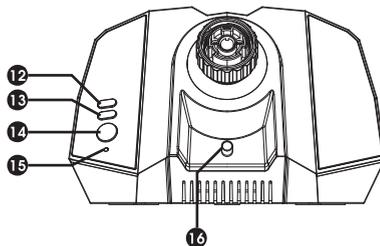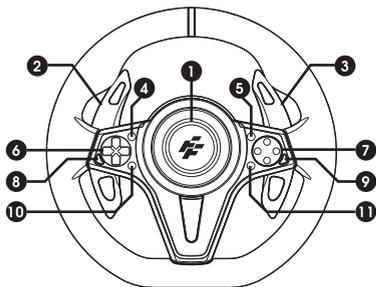

1. Ring/Central Light
2. Left Paddle Shifter
3. Right Paddle Shifter
4. L2
5. R2
6. D-Pad
7. X, Y, A, B Buttons


8. PROG
9. L3
10. L3
11. R3
12. Share
13. Options
14. Home

15. LED Mode indicator
16. 90° / 270° Rotation Switch
17. 3.5mm audio
18. Guiding port
19. Expansion
20. Port of foot pedals
21. USB cable


22. Shifter Port
23. Gear Shifter Mode
24. Gears 1-6 + R gear
25. Hand-Brake switch
26. Clutch
27. Brake
28. Accelerator / GAS

## MOUNTING METHODS



### WHEEL-BASE CONNECTION:

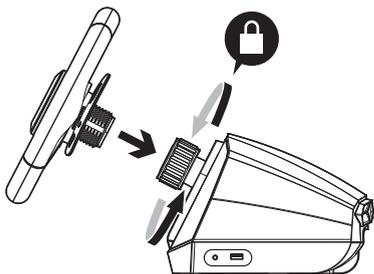



### CLAMP INSTALLATION:

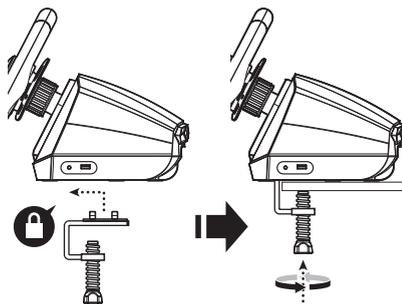

### INSTALLATION OF RACING SEAT/STAND:

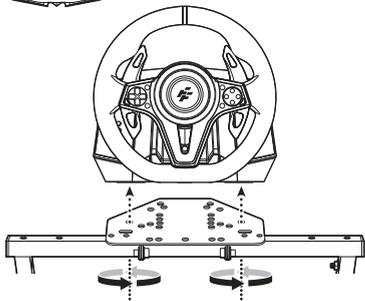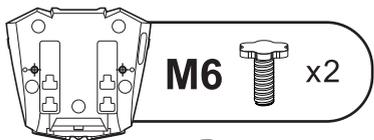


### INSTALLATION OF PEDALS ON STAND:

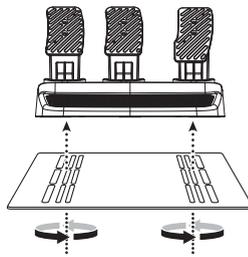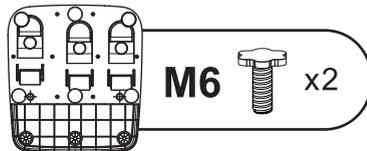


## QUICK GUIDE- CONNECTION WITH PLAYSTATION®4


1. Plug both of the Gear shifter and foot pedals cable to the right sockets on back to the steering wheel

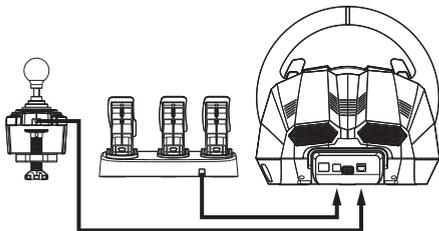


3. Please plug the guiding controller, DS4, with the steering wheel, the port is on back of the wheel, see above image.

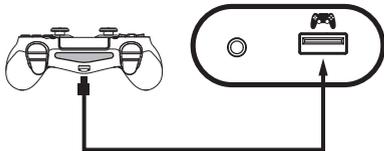

2. Power off the DS4 ( the blue LED ON means the DS4 is connected with PS4), then press the PS button until the blue LED is off. When the blue LED is off which means the DS4 is powered off.

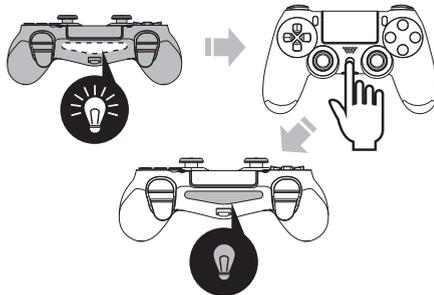


4. Connect the steering wheel USB plug to the PS4 console USB port. The base indicator light turns blue, press the "HOME" button to connect.

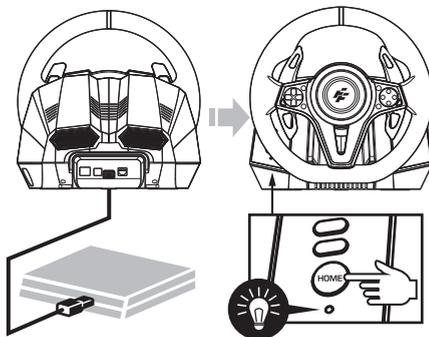


## QUICK GUIDE- CONNECTION WITH XBOX® ONE™ & XSX / XSS


1. Plug both of Gear shifter and footpedals cable to the correspond ports on back of steering wheel.

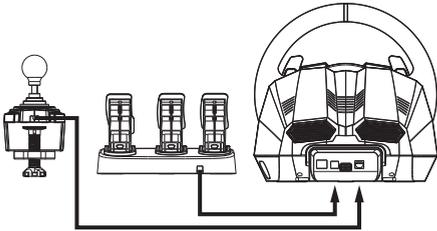


2. Power off the XB controller (the light ON means the XB controller is connected with Xbox console), then long press X button till the blue LED is off. (When Blue Led is off which means the XB controller power off!)

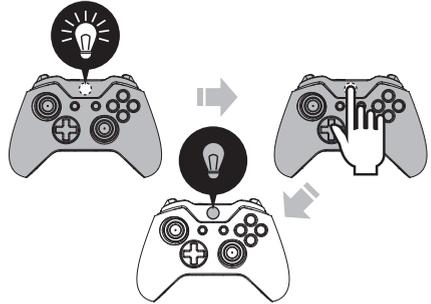

3. Connect the original XBOX® ONE™ or XBOX Series X/S controller with the USB cable and insert the cable into the steering wheel for guiding (the XBOX® ONE™ or XBOX Series X/S controller must be turned off).


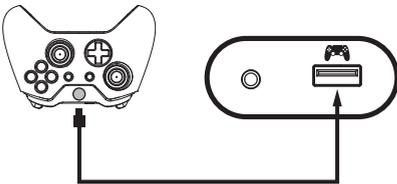


4. Connect the steering wheel USB plug to the Xbox console USB port. The base indicator lights up green, the wheel is ready for using.

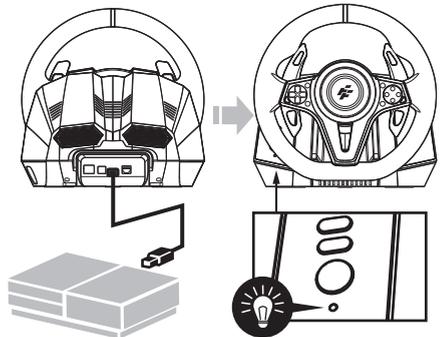


## QUICK GUIDE- CONNECTION WITH NINTENDO® SWITCH™


1. If you have not used the original "Switch Pro Controller" before, please use "JoyCon" to perform the following settings to enable the controller's wired communication function

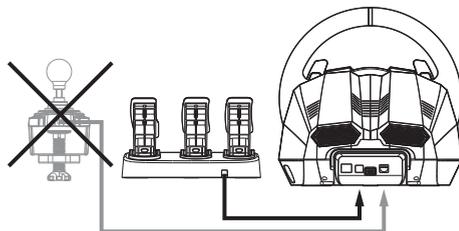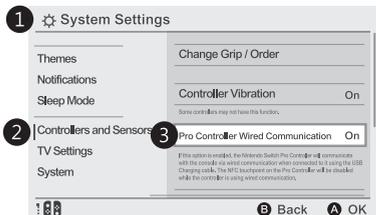

3. Insert the steering wheel USB connector into the USB port of the N-SWITCH console base. The base indicator light turns red, the wheel is ready for using.

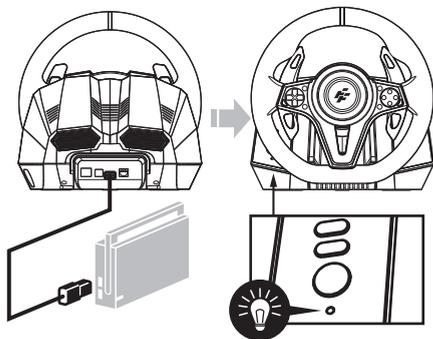

4. Screen shot: Press "HOME" and "SHARE" button in the same time

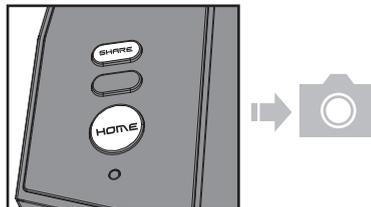

## PROGRAMMING BUTTON DESIGN

Remarks: Please turn the hand-brake to OFF before programming.

### PROGRAMMING FEATURES:

- The programming buttons : X, B, Y, A, L1, L2, R1, R2
- The defined programming buttons include: Left bumper, Right bumper, Clutch, Accelerator, Brake, L3 and R3.

### PROGRAM DESIGN CONFIGURATION:

- Press and hold the "PROG" button for 3 seconds until the ring light turns green.
- Press the programmable button, and till the ring light flash green.
- Press the programming source button, and the ring light will be restored and programming is completed.

### CLEANUP PROGRAMMING:

- Press and hold the "PROG" button for 3 seconds until the ring light turns green.
- Press the programmed button, and till the ring light flash green.
- Press the programmed button again, the ring light will be restored, and the programmed single button

### PROGRAM EXIT:

- Press and hold the PROG button for 3 seconds to enter programming mode. If there is no action at this time, the programming function will automatically exit after 8 seconds.

## SENSITIVITY CONFIGURATION:

- Press and hold the PROG button for 3 seconds — the ring light will turn green.
- Press the Up key on the D-PAD — the ring light will flash once to set High Sensitivity mode.
- Press the Left or Right key on the D-PAD — the ring light will flash once to set Medium Sensitivity mode.
- Press the Down key on the D-PAD — the ring light will flash once to set Low Sensitivity mode.

## DIRECTION OF MAXIMUM EFFECTIVE ANGLE SETTING METHOD AT 90° GEAR POSITION:

- Turn the 90°/270° switch to the 90° position.
- Press and hold the PROG button on the wheel for 3 seconds — the ring light will stay solid green.
- Turn the steering wheel to the desired angle (must be greater than 60°).
- Press the SHARE button — the ring light will flash once to complete the setting.

### RESTORE THE 90° SETTING:

Press and hold the PROG button for 3 seconds, turn the steering wheel fully to its maximum range, then press the SHARE button. The ring light will flash once to complete the setting.

## LED BUTTON FUNCTIONS:

Press the LED button briefly to cycle through the six colors of red, green, blue, cyan, yellow, and purple..

Press and hold the LED button for 3 seconds to quickly flash the ring light. Press the button again to switch the ring light mode. The following modes are available:

1. Steady light / 2. Breathing light mode / 3. Turn off the ring light

## INTRODUCTION OF 3-PEDAL:

- The clutch function is equipped in the 3-pedal, and is compatible with the games which support this function.
- The left pedal is the clutch, the middle one is the brake, and the right one is the gas.
- Only gas and brake functions can be used if a game does not support clutch.

## INTRODUCTION OF SIX-SPEED SHIFTER

- This function is not applicable unless the games support it.
- The MODE switch can be turned to the Six-speed shifter position; if the switch is OFF, the Six-speed shifter positions are set at 1, 2, 3, 4, 5, 6, and R. If the switch is ON, the Six-speed shifter positions are set at 7, 8, 9, 10, 11, 12, and R subject to PC mode only.
- The HAND-BRAKE switch of function is applicable; if the hand-brake switch is OFF, HAND-BRAKE is disabled; if the HAND-BRAKE switch is ON, parking brake is workable.

## PLAYSTATION® 3:

- Insert the cables of pedals and Six-speed shifter as the complete set into the corresponding interfaces of the steering wheel; turn on your PS3™ and then insert the main cable of the steering wheel into the PS3™ USB port.
- After the power-on is completed, the steering wheel mode indicator light turns green and assigns a channel to the steering wheel automatically
- You may now start playing the game, or enter the related configurations.
- You can press the Home button once to enter the XBM configuration when playing a gamewhich can display the current controller player. Or, you can press and hold the Home button for 2 seconds to enter the shutdown settings.

## PC MODE:

### STEERING WHEEL D-INPUT MODE ( CONNECT TO SIX-SPEED SHIFTER )

- When the steering wheel is connected to the Six-speed shifter which is under the "Steering Wheel (D-INPUT)" mode.
- If the game does not support D-INPUT mode, please remove the "SIX-SPEED SHIFTER".

### GAMEPAD X-INPUT MODE ( DOES NOT CONNECT WITH SIX-SPEED SHIFTER. )






#### WHEEL TEST:

- Enter WINDOWS Vista/7/8/10 OS, insert the driver disc, press SETUP twice and install the driver following the instructions.
- Connect the wheel to PC / USB→Startup→Control Panel→Equipment & Printer→Right Click Equipment→Controller Settings→Property.

## TROUBLESHOOTING :

- Please re-insert the steering wheel or check if the guide controller is functioning normally or not when the LED indicator does not light up.
- When the steering wheel does not respond or the screen does not react, the device may have crashed; please reboot the device and re-insert the steering wheel.
- When the steering wheel is not operated properly, please re-insert the steering wheel.
- The guide controller must be turned off when connecting to prevent the connection between the controller and device from failing.
- Because the programming design is equipped with a memory function, therefore, if the button configurations are incorrect, please follow "Cleanup Programming" or "Program Design Full Deletion" to delete the programs.

## 按鍵功能示意圖：

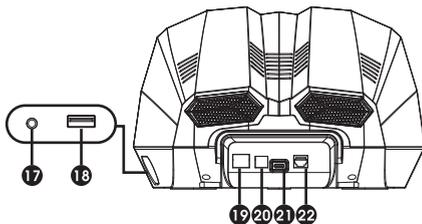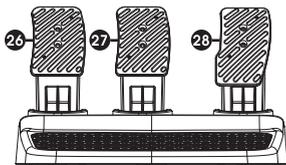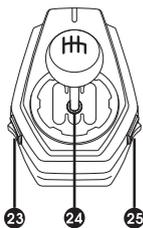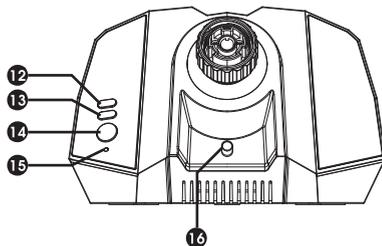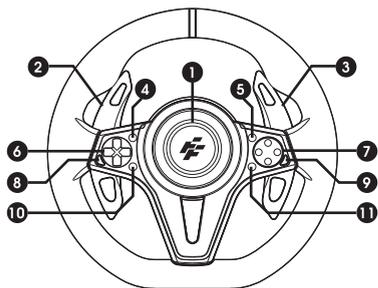

1. 環形燈
2. 左翼
3. 右翼
4. L2
5. R2
6. 十字鍵
7. X, Y, A, B 功能鍵


8. PROG
9. LED
10. L3
11. R3
12. Share 鍵
13. Options 鍵
14. Home 鍵

15. LED 指示燈
16. 90度 / 270度切換開關
17. 耳機孔
18. 引導孔
19. 擴展口
20. 腳踏板接口
21. Type-C 電源接口


22. 排檔桿接口
23. 排檔桿模式
24. 6+R檔
25. 手剎
26. 離合器
27. 剎車
28. 油門

## ■ 固定方式：



方向盤與底座連接方式

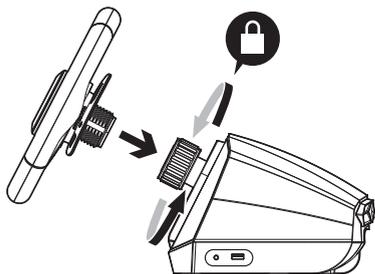



夾具安裝方式：

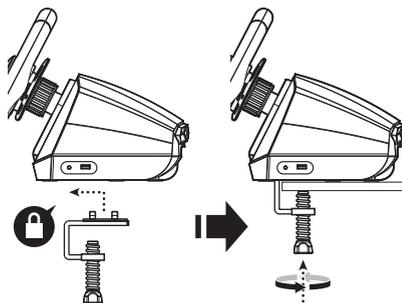

賽車椅支架安裝方式：

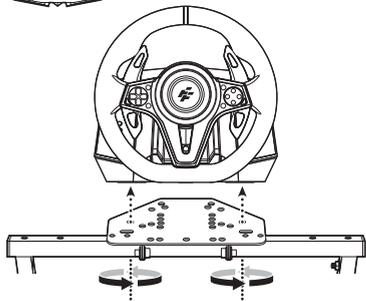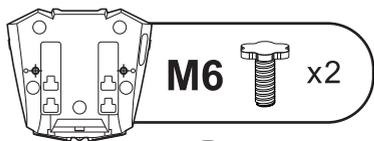


踏板在支架上的安裝：

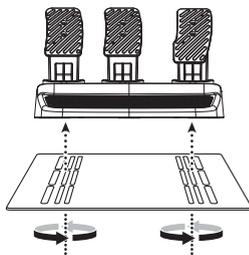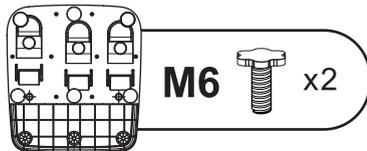


## 快速安裝- 連接PLAYSTATION®4


1. 將排檔桿與腳踏板插入方向盤的腳踏板插孔

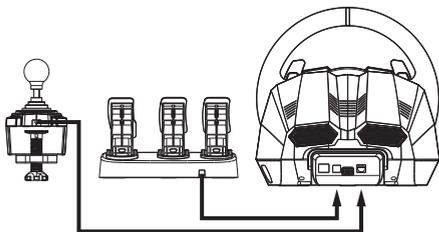


2. 將 PS4 原裝手柄電源關閉(藍燈亮表示手柄有連到PS4主機)，接著長按 PS 鍵直到藍燈熄滅，檢查藍燈熄滅表示手柄電源關閉。

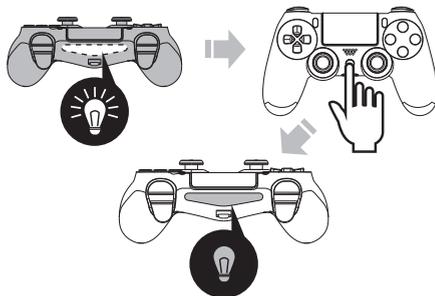

3. 將引導USB線插入手柄 USB 孔，接著將引導USB線插入方向盤引導孔。

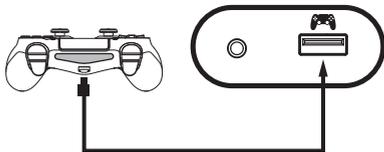


4. 將方向盤 USB 接頭插入 PS4 主機 USB 孔，底座指示燈亮藍燈，再按一下HOME 鍵連線。

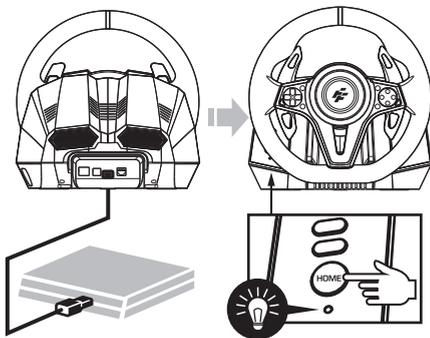


## 快速安裝-連接XBOX® ONE & XSX / XSS


1. 將排檔桿與腳踏板插入方向盤的腳踏板插孔

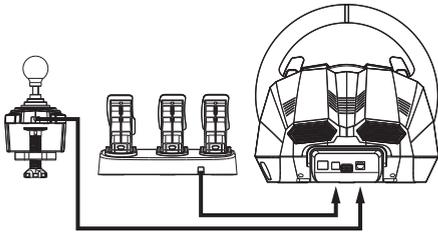


2. 將 XBOX 原裝手柄電源關閉 (燈亮表示手柄有連到XBOX主機)，接著長按 XBOX 鍵直到藍燈熄滅，檢查藍燈熄滅表示手柄電源關閉。

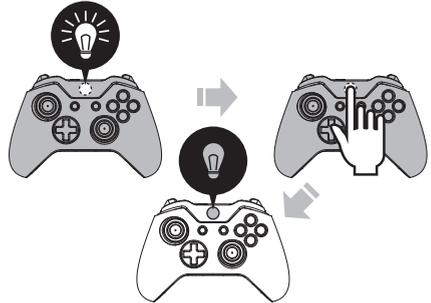

3. 將引導USB線插入手柄 USB 孔，接著將引導USB線插入方向盤引導孔。


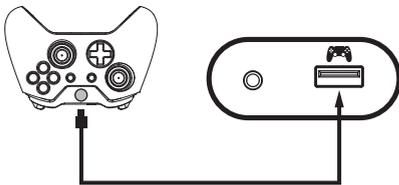


4. 將方向盤 USB 接頭插入 XBOX 主機 USB 孔，當底座指示燈亮綠色，即可使用。


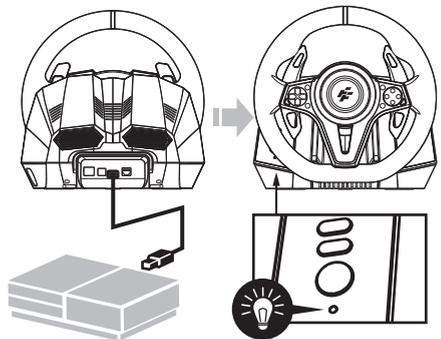


## 快速安裝- 連接 SWITCH

1. 若之前沒有使用過原廠"Switch Pro"手柄，請先使用"JoyCon"執行以下設定開啟手柄的有線通訊功能。
2. 將腳踏板插入方向盤的腳踏板插孔，(註: SWITCH 不支援六速排檔桿及離合器功能)。

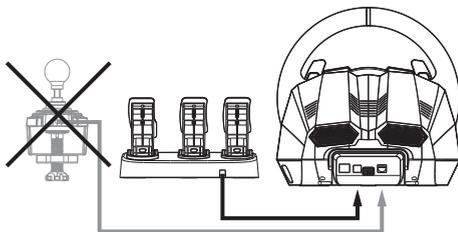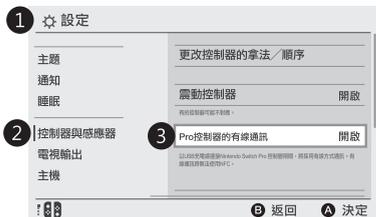

3. 將方向盤 USB 接頭插入 SWITCH 主機底座的 USB 孔，當底座指示燈亮紅色，即可使用。
4. 同時短按一下"HOME"和"SHARE"鍵，是截圖功能。

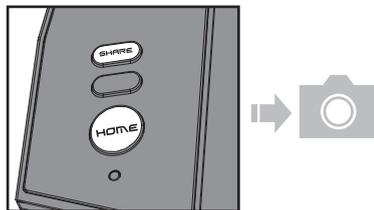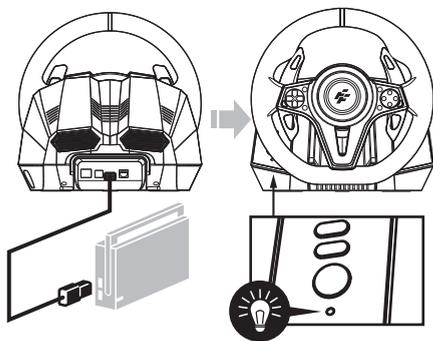

## 按鍵編程功能

編程功能介紹：

- 編程來源鍵有: X, B, Y, A, L1, L2, R1, R2。
- 可編程鍵有: 左翼, 右翼, 油門, 剎車, 離合器, L3, R3。

編程功能設定：

- 長按 PROG 按鍵 3 秒, 直到環形燈顏色變為綠燈。
- 按壓可編程鍵, 環形燈變為綠燈閃爍。
- 按壓編程來源鍵, 環形燈恢復, 編程完畢。

編程單鍵清除：

- 長按 PROG 按鍵 3 秒, 直到環形燈顏色變為綠燈。
- 按壓已被編程的按鍵, 環形燈變為綠燈閃爍。
- 再次按壓已被編程的按鍵, 環形燈恢復, 編程單鍵清除完畢。

程式設計退出：

- 長按 PROG 按鍵 3 秒進入編程模式, 此時如果無動作, 則 8 秒後自動退出編程功能。

## 靈敏度設置：

- 長按PROG鍵3秒, 環形燈亮綠色
- 按D-PAD方向鍵上鍵, 環形燈閃爍一次, 設置為高靈敏度狀態。
- 按D-PAD方向鍵左或者右鍵, 環形燈閃爍一次, 設置為中靈敏度狀態。
- 按D-PAD方向鍵下鍵, 環形燈閃爍一次, 設置為低靈敏度狀態。

## 在900度檔位時, 方向最大有效角度設定方法：

- 將900度/270度切換開關切換到 900度位置。
- 長按方向盤PROG 鍵3秒, 環形燈綠燈常亮。
- 轉動方向盤到要設定的角度 (需大於60度)。
- 按壓SHARE鍵環形燈閃爍一次, 完成設定。

恢復900度設定:

長按方向盤PROG 鍵3秒, 轉動方向盤到最大, 再按壓SHARE鍵, 環形燈閃爍一次, 完成設定。

## LED鍵功能：

短按LED鍵切換盤面環形燈顏色, 顏色有紅, 綠, 藍, 青, 黃, 紫六色循環切換, 長按LED鍵3秒切換環形燈亮燈方式。  
亮燈方式有: 1. 長亮 / 2. 呼吸燈模式 / 3. 關閉環形燈

## ■ 三踏板介紹：

- 3踏板中裝有離合器功能，並且與支持該功能的遊戲兼容。
- 左踏板是離合器，中間踏板是剎車，右踏板是油門。
- 如果遊戲不支持離合器，則只能使用油門和剎車功能。

## ■ 六速變速器介紹：

- 除非遊戲支持，否則此功能不適用。
- 可以將MODE開關轉到六速變速器位置；如果開關為OFF，則六速變速器位置設置為1、2、3、4、5、6和R。如果開關為ON，則六速變速器位置設置為7、8、9，10、11、12和R僅適用於PC模式。
- 手刹開關功能；如果手刹開關為OFF，則HAND-BRAKE禁用；如果HAND-BRAKE開關為ON，則手刹可使用。

## ■ PLAYSTATION® 3：

- 把配套的腳踏板線插入方向盤對應接口，打開PS3™主機電源並開機，將方向盤USB線插入PS3™主機USB接口。
- 開機完成後，方向盤模式指示燈青色長亮，且主機會自動分配一個通道給方向盤。
- 此時可進入主機開始遊戲或對主機的相關功能進行設置。
- 在操作中，按方向盤的HOME鍵一次可進入XBM設置介面，可顯示當前控制器玩家，或長按HOME鍵2秒可進入關機設置介面。

## ■ PC 功能介紹：

### 方向盤 D-INPUT 模式 ( 接六速排檔桿 )：

當方向盤接上六速排檔桿時為方向盤 ( D-INPUT ) 模式，若遊戲不支持D-INPUT模式，請移除六速排檔桿使用。

### 手把 X-INPUT 模式 ( 不接六速排檔桿 )：

### 產品測試：

- 進入WINDOWS Vista/7/8/10系統，放入驅動光碟，按兩下SETUP，按電腦提示安裝驅動程式。
- 將方向盤USB插頭插入電腦→開始→控制台→設備和印表機→右鍵點擊設備→遊戲控制器設置→屬性。
- 在測試介面，可分別對按鍵及軸進行功能測試。

## ■ 疑難排除：

- 當方向盤插到主機上模式燈不亮的時候請重插一次或檢查引導手柄是否正常工作。
- 當方向盤沒有反應，主機畫面不動時，主機可能意外死機，請重新開機主機再插入方向盤。
- 當方向盤在遊戲中操作不當時，請重新拔插方向盤後再次連接。
- 在連接引導手柄時，必須把引導手柄關機，以免手柄與主機連接而導致引導不成功。
- 如感覺按鍵鍵位不對了，請按"程式記憶清除"或"程式設計全部清除"的方法清除編程。



[www.flashfire.tw](http://www.flashfire.tw)

Distribution in Taiwan :

Flash Fire Accessories Inc.

8F-4, No.14, Ln. 609, Sec. 5, Chongxin Rd.,

Sanchong Dist., New Taipei City 24159, Taiwan

Tel: +886-2-2999-1588

